



875-0176-000

Integrator Guide

Revision B3
April 26, 2021

**SBX-4
OEM Board**

Table of Contents

Device Compliance, License and Patents	3
Chapter 1: Introduction	5
Overview	5
Product Overview	6
Chapter 2: Integrating the SBX-4	7
Overview	7
Mechanical Layout	8
LED Indicators	9
SBX-4 Block Diagram	10
SBX-4 Connector Pin Assignments	11
Signal Lock Indicator Pin	13
Reset Pin	14
Antenna Interface	15
Radio Frequency Immunity and Emissions	16
SBX-4 Dual Serial Port Overview	17
Factory Default Settings.....	19
SBX-4 Integration Summary.....	20
Chapter 3: SBX-4 Operation	22
Overview	22
Introduction	23
Beacon Information	24
New SBX-4 Commands.....	28
Evaluating Performance.....	32
Appendix A: Troubleshooting	33
Overview	33
Troubleshooting.....	34
Appendix B: Technical Specifications.....	36
Technical Specifications	37
End User License Agreement	40
Warranty Notice.....	44

Device Compliance, License and Patents

Device Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 This device may not cause harmful interference, and
 this device must accept any interference received, including interference that may cause undesired operation.

This product complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at [HTTPS://HEMISPHEREGNSS.COM/ABOUT-US/QUALITY-COMMITMENT](https://hemispheregnss.com/about-us/quality-commitment).

E-Mark Statement: This product is not to be used for driverless/autonomous driving.

Copyright Notice

Copyright Hemisphere GNSS, Inc. (2021). All rights reserved.
 No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Hemisphere GNSS.

Trademarks

Hemisphere GNSS®, the Hemisphere GNSS logo, TRACER™, Crescent®, Eclipse™, e-Dif®, L-Dif™, PocketMax™, S320™, SBX-4™, Vector™, Vega™, Phantom™, Cygnus™, Atlas™, aRTK, SureFix™, and Athena™ are proprietary trademarks of Hemisphere GNSS, Inc. Other trademarks are the properties of their respective owners.

Patents

Hemisphere GNSS products may be covered by one or more of the following patents:

Patents			
6111549	6876920	7400956	8000381
6397147	7142956	7429952	8018376
6469663	7162348	7437230	8085196
6501346	7277792	7460942	8102325
6539303	7292185	7689354	8138970
6549091	7292186	7808428	8140223
6711501	7373231	7835832	8174437
6744404	7388539	7885745	8184050
6865465	7400294	7948769	8190337
8214111	8217833	8265826	8271194
8307535	8311696	8334804	RE41358

Australia Patents	
2002244539	2002325645
2004320401	

Continued on next page

Device Compliance, License and Patents, Continued

Notice to Customers Contact your local dealer for technical assistance. To find the authorized dealer near you:

Hemisphere GNSS, Inc
8515 East Anderson Drive
Scottsdale, AZ 85255 USA
Phone: (480) 348-6380
Fax: (480) 270-5070
PRECISION@HGNSS.COM
[HTTPS://WWW.HEMISPHEREGNSS.COM/](https://www.hemispheregnss.com/)

Technical Support If you need to contact Hemisphere GNSS Technical Support:

Hemisphere GNSS, Inc.
8515 East Anderson Drive
Scottsdale, AZ 85255 USA
Phone: (480) 348-6380
Fax: (480) 270-5070
SUPPORT.HGNSS.COM

Documentation Feedback Hemisphere GNSS is committed to the quality and continuous improvement of our products and services. We urge you to provide Hemisphere GNSS with any feedback regarding this guide by opening a support case at the following website:

[HTTPS://HEMISPHERE.ATLASSIAN.NET/SERVICEDESK/CUSTOMER/PORTAL/2/USER/LOGIN?DESTINATION=PORTAL%2F2](https://hemisphere.atlassian.net/servicedesk/customer/portal/2/user/login?destination=portal%2F2)

Chapter 1: Introduction

Overview

Introduction

This document provides instructions and recommendations for a successful integration of the SBX-4 engine.

This document refers to SBX-4 board 500-1597-10. For SBX-4 board 500-1214-001# refer to prior version (Rev B2) of this manual. The performance and specifications of these two boards are identical.

You can download this manual from the Hemisphere GNSS website at WWW.HGNSS.COM.

Contents

	Topic	See Page
	Product Overview	6

Product Overview

Product overview

The SBX-4 is an extremely sensitive 300 kHz minimum shift keying (MSK) demodulator. It obtains differential GPS corrections broadcast by radio beacons adhering to standards such as International Telecommunications Union M.823 and various broadcast standards in the frequency range of 283.5 to 325.0 kHz.

This document is intended to assist a systems designer with the integration of the SBX-4. Successful integration of this module within a system will require significant electronics expertise, such as power supply design, serial port level translation, reasonable radio frequency competency, an understanding of electromagnetic compatibility and circuit design and layout.

The SBX-4 engine is a low-level module intended for custom integration with the following general integration requirements:

- Regulated power supply input (3.3 VDC +/- 3%) and 70 mA continuous
- Low-level serial port communications (3.3 V CMOS)
- The beacon antenna is powered with a separate regulated voltage source of 5 VDC
- The antenna input impedance is 50 ohms

The chapters that follow provide detailed information on the SBX-4 module, including the hardware and software interface, in addition to various descriptions of technologies and features that it supports.

Some notable features of the SBX-4 module are:

- Dual channel tracking for increased robustness
 - Dual serial ports accommodate both NMEA and RTCM communications
 - Certified IEC 61108-4 compliant
 - Low power and lock status LEDs permit visual verification of receiver status
 - Reverse compatibility ensures operation in existing SBX-2 and SBX-3 integrations
 - Boot loader for firmware upgrade reliability
-

Chapter 2: Integrating the SBX-4

Overview

Introduction This chapter provides instructions on how to integrate the SBX-4 OEM board.

Contents

	Topic	See Page
	Mechanical Layout	8
	LED Indicators	9
	SBX-4 Block Diagram	10
	SBX-4 Connector Pin Assignments	11
	Signal Lock Indicator Pin	13
	Reset Pin	14
	Antenna Interface	15
	Radio Frequency Immunity and Emissions	16
	SBX-4 Dual Serial Port Overview	17
	Factory Default Settings	19
	SBX-4 Integration Summary	20

Mechanical Layout

Mechanical layout

Figure 2-1 provides the physical layout of the SBX-4 beacon receiver, including dimensions and key components.

Note: Dimensions are in inches.

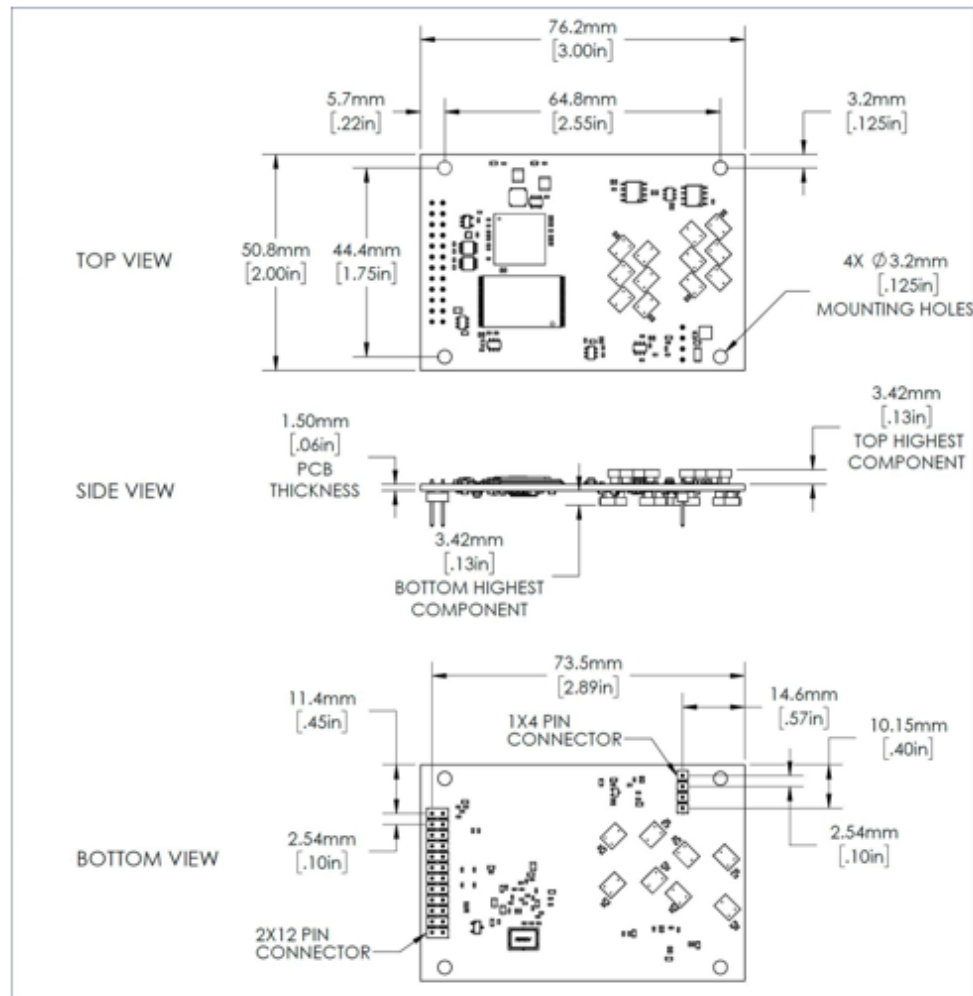


Figure 2-1: SBX-4 Mechanical Layout

LED Indicators

LED indicators The SBX-4 engine has two surface-mounted LED indicators located on the opposite side of the board in relation to the header connectors. The red LED is for signaling the power-on status of the receiver, labeled with “PWR” silk-screening. The green LED is for indicating signal acquisition, labeled with “LOCK” silk-screening.

When power is applied to the SBX-4, the power LED illuminates and when the SBX-4 achieves signal acquisition on a valid DGPS beacon, the lock LED illuminates. Figure 2-2 shows the front and back of the SBX-4, including the illumination of the power and lock LED indicators.

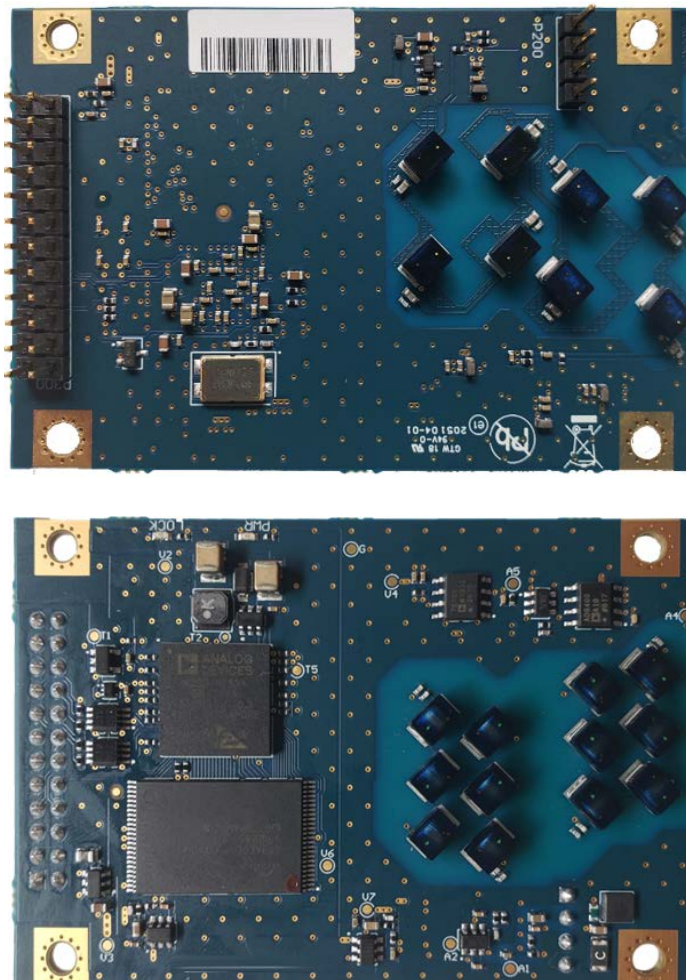


Figure 2-2: SBX-4 front and back

SBX-4 Block Diagram

SBX-4 block diagram

The SBX-4 accepts an analog input signal between 283.5 kHz and 325.0 kHz from an antenna into its front end where it is filtered and converted to a digital output.

The Digital Signal Processor (DSP) demodulates GPS correction information from the digital stream. The output of the SBX-4 is RTCM SC-104 DGPS correction data at a 3.3V CMOS interface level. Figure 2-3 provides a view of the block diagram.

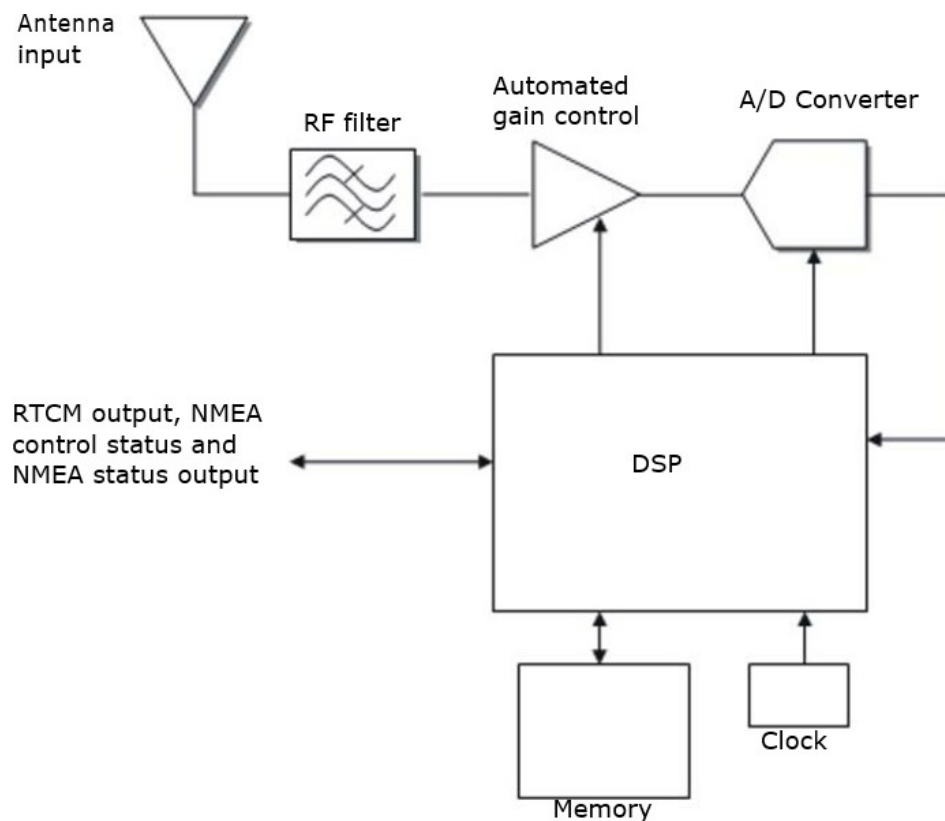


Figure 2-3: Block diagram

SBX-4 Connector Pin Assignments

SBX-4 connector pin assignments The SBX-4 has two header connectors designated as J200 and J300, labeled with on-board silk-screening. The J200 connector is a 1 x 4 pin header with 0.1 in (2.54 cm) spacing that provides antenna power input, and signal distribution. The J300 connector is a 2 x 12 pin header with 0.1 in (2.54 cm) spacing that provides access to antenna power input, receiver serial ports, receiver power, external reset and external lock indicator functions.

Table 1-1 provides pin-out information for connector J200:

Table 1-1: SBX-4 connector J200 pin-out (Samtec TSW-10407-G-S)

Pin	Signal Name	Signal Type	Signal Direction	Description
1, 3	Ground	Power		Analog ground
2	RF signal input	3.3 V CMOS	Input	Antenna RF signal input
4	Antenna power output	3.3 V CMOS	Output	Antenna power supply 5 VDC

Continued on next page

SBX-4 Connector Pin Assignments, Continued

SBX-4 connector pin assignments, continued

Table 1-2 provides pin-out information for connector J300:

Table 1-2: SBX-4 connector J300 pin-out (Samtec TSW 11207-G-D)

Pin	Signal Name	Signal Type	Signal Direction	Description
1, 2	Antenna power in	Power	Input	Antenna power supply input: 5 VDC
3, 4	SBX-4 power in	Power	Input	Receiver power supply input: 3.3 VDC
14	TXD0 output	3.3 V CMOS	Output	NMEA, RTCM and status output
15	TXD1 output	3.3 V CMOS	Output	NMEA and status output
16	Lock	3.3 V CMOS	Output	Lock indicator (active high)
17	RXD0 Input	3.3 V CMOS	Input	Command/query input
18	RXD1 Input	3.3 V CMOS	Input	Command/query input
19	External reset input		Input	External reset input (active low)
21, 22 23, 24	Ground	Power		Digital ground

Note: In order to maintain backwards hardware compatibility with the SBX-3, it is possible to power the SBX-4 with 5 V. The serial data output level will track the input voltage when greater than 3.3 V is supplied. The serial data inputs will be tolerant to voltages up to the level of the supplied input voltage.

Signal Lock Indicator Pin

Signal lock indicator pin

Pin 16 of connector J300 may be used to drive an LED or sensor to indicate that the SBX-4 is locked to a beacon signal and is demodulating RTCM SC-104 data. The maximum current available from this pin is 5 mA at an input voltage 3.3 V. The output of this signal may be transistor buffered within your integration if greater current is required.

Figure 2-4 illustrates an example lock indicator circuit.

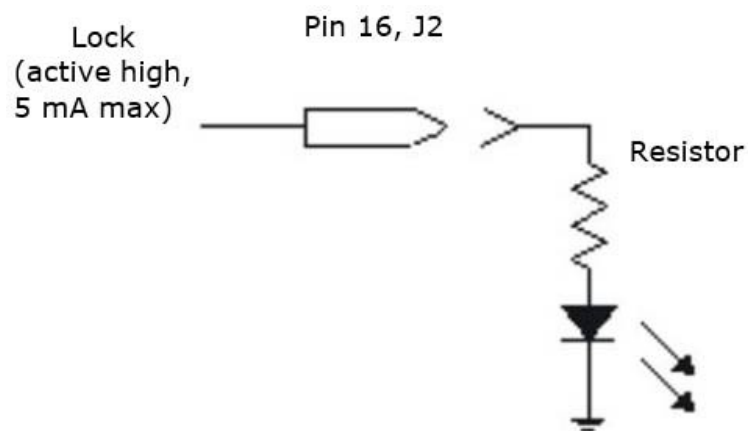


Figure 2-4: Lock indicator circuit

Reset Pin

Reset pin

Pin 19 of connector J300 may be used to reset the SBX-4. Activating the reset circuit of the SBX-4 results in the same effect as cycling the input power to the receiver. The operating configuration of the receiver before reset is maintained, including operating mode, baud rate, frequency and MSK rate of the last tuned station.

Figure 2-5 illustrates an example reset switch circuit.

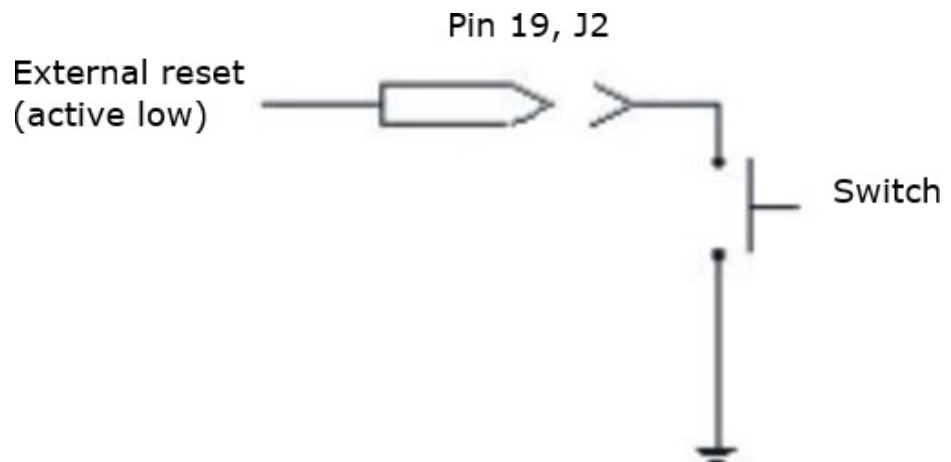


Figure 2-5: Reset switch circuit

Antenna Interface

Antenna interface

Power may be supplied to the antenna externally through the SBX-4 OEM beacon receiver in one of two ways:

- Connect Pin 4 of J200 to the antenna power supply (+5 VDC) and connect pin 1 and 3 to ground
- Connect Pin 1 and 2 of SBX-4 connector J300 to the associated power supply (+5 VDC) and connect pin 1 and 3 of J200 to ground

Pin 4 of connector J200 is internally connected to Pins 1 and 2 of connector J300. Antenna signal input to the receiver is provided via Pin 2 of J200.

Note: The antenna input voltage is not current limited on the SBX-4 board. If current limiting is required, the circuitry must be provided within your integration.

Note: External power applied to the SBX-4 for powering the antenna is internally coupled to the signal input pin (Pin 2 of J300). You do not have to provide this circuitry within your integration.

If you intend to use a 4-pin connector (for example, Panduit CE100F22-4) and a length coaxial cable to interface the antenna to the SBX-4, follow these instructions:

1. Connect the center conductor of the coaxial cable to Pin 2 of J200.
 2. Connect the shield of the coaxial cable to Pin 1 or Pin 3 of J200.
-

Radio Frequency Immunity and Emissions

Radio frequency immunity and emissions When integrating the SBX-4, ensure that complete integration does not emit significant noise within the 283.5 to 325.0 kHz beacon band. In-band interference incident upon the SBX-4 or its antenna can influence the reception enough that its quality may be degraded, resulting in a lower SNR measurement with reduced GPS correction data throughput.

Beacon antennas are designed to pick up any radio frequency energy within the 283.5 to 325.0 kHz beacon band. Both beacon signals and environment noise will be picked up by the antenna and amplified before going to the receiver. Eliminating the majority of noise within the beacon band is crucial to achieve optimal system performance.

It is very important to consider the overall performance objectives of the system design with respect to radio frequency emissions.

Certain nations and industries around the world require positioning and navigation electronics to achieve certain levels of electromagnetic emissions.

SBX-4 Dual Serial Port Overview

SBX-4 dual serial port overview

The SBX-4 features two full duplex serial ports (Port 0 and Port 1). Use of the second serial port is an option as the SBX-4 supports identical functionality as its predecessor, the SBX-3 on Port 0.

The main purpose of the second serial port is to allow the continuous flow of RTCM data from Port 0 to a GPS receiver while allowing monitoring of SBX-4 performance via NMEA response messages on Port 1. Separating RTCM differential data from NMEA status data when output via the same serial port poses software integration challenges and potential GPS RTCM reception conflicts.

Single Serial Port Operation

Some integration designs using the SBX-4 beacon receiver include a micro-controller between the beacon and GPS receiver to provide enhanced communication and data parsing capability. Within this type of integration, it is possible for the micro-controller to command and query the beacon receiver and to parse NMEA response strings from RTCM data without impeding the continuous flow of RTCM data to the connected GPS sensor.

To separate NMEA messages from RTCM data output by Port 0 through a parsing routine, without causing a parity failure of the RTCM, it is necessary to take advantage of the fact that “\$” and “<LF>” are not supported within the RTCM specification, provided there are no bit errors in the RTCM stream to start with. Therefore, if a “\$” is received, then it should be considered as the beginning of a NMEA sentence and a “<LF>” should be expected within a window of certain length. If the parsing routine does not receive one, due to an unlikely communication line error, after a window of a particular number of bits has passed, re-synchronization to the RTCM data must occur.

Note: If Port 1 is not being used, pin 18 should be connected to the input power supply through a 10 Kohm resistor.

Continued on next page

SBX-4 Dual Serial Port Overview, Continued

Dual Serial Port Operation Although an integration may be designed with a microprocessor between the SBX-4 and the GPS receiver to tune and monitor SBX-4 status, the second serial port of the SBX-4 eliminates the requirement to develop a NMEA message parsing algorithm.

With this type of architecture, the SBX-4's main serial port may be interfaced to the GPS receiver's receive line to provide RTCM correction data. The secondary serial port interfaces to the microprocessor for NMEA configuration and querying. This ensures that NMEA response messages do not interrupt the continuous flow of RTCM data to the GPS receiver.

Factory Default Settings

Factory default settings

Table 1-3 presents the factory default SBX-4 operating mode, while Table 1-4 lists the default SBX-4 communication settings. These operation and port settings are valid upon initial power-up. The SBX-4 maintains any changes made to its operating or port settings in non-volatile memory for subsequent power cycles.

Table 1-3: Default SBX-4 operating mode

Tune Mode
Automatic

Table 1-4: Default SBX-4 port settings

Baud Rate	Data Bits	Parity	Stop bit	Interface level
4800	8	None	1	3.3 V CMOS

SBX-4 Integration Summary

SBX-4 integration summary

The following steps summarize the general requirements for integrating the SBX-4 and identifies the command-and-control features provided:

1. SBX-4 Power Input - Apply a 3.3 VDC power input to Pin 3 of J300 with the power- return connection at Pin 21 of J300.
2. Antenna Power Input - Apply +5 VDC to either:
 - Pin 4 of J200 with an antenna power ground connection on Pin 1 of J200
 - or-
 - Pin 1 of J300 with an antenna power ground connection to Pin 1 of J200
3. Antenna Signal Input to SBX-4 - Connect the coaxial cable center conductor to Pin 2 of J200 and the shield to Pin 3 of J200.
4. SBX-4 Serial Ports - The SBX-4 serial ports communicate at a 5 V CMOS interface level. You must provide level translation circuitry to connect to a standard RS232/422 type device. Pin assignments for the communication ports of the SBX-4 are as follows:
 - Pin 14 of J300 - TXD0, this is the Port 0 transmit data output from the SBX-4
 - Pin 15 of J300 - TXD1, this is the Port 1 transmit data output from the SBX-4
 - Pin 17 of J300 - RXD0, this is the Port 0 receive data input to the SBX-4
 - Pin 18 of J300 - RXD1, this is the Port 1 receive data input to the SBX-4
 - Pin 23 of J300 - Signal return, Port 0
 - Pin 24 of J300 - Signal return, Port 1
5. The following events occur when the SBX-4 is powered-up, or reset:
 - Receiver serial number is output
 - Configuration and beacon tables are verified and defaulted if required
 - Software identification and version are reported
 - Channel status information is reported

Continued on next page

SBX-4 Integration Summary, Continued

**SBX-4
integration
summary,
continued**

6. The following strings are output by the SBX-4 during power up or following receiver reset:

```
$PCSI,DGPS,P0  
$PCSI,S/N:00019001  
$PCSI,FCFGcrc,CBF8,CCFGcrc,CBF8,Pass  
$PCSI,FGLBcrc,448A,CGLBcrc,448A,Pass  
$PCSI,FLSHcrc,1C12 Pass  
$PCSI,FSTAcrc,FBEA User,FFFF,FFFF  
$PCSI,SBX~4 P030-0 2 Channel DGPS Version 001  
$PCSI,F2835,0,R100,0,CO,0  
$PCSI,F2835,0,R100,0,C1,0
```
 7. When powered for the first time, the SBX-4 will operate in the default ABS mode and will conduct a Global Search (GS) to identify the highest quality beacon signal. Following the signal acquisition phase of the GS and when the primary receiver channel has acquired a beacon, the receiver's second channel will conduct a background search.
 8. When the SBX-4 receives a valid RMC message on Port 0, it will switch to database mode.
 9. You may tune the receiver to a specific beacon using the \$GPMSK Manual Tune command referred to in [Hemisphere GNSS' Technical Reference Manual](#).
 10. When tuned to a valid beacon, the SBX-4 monitors RTCM SC-104 message lock, parity check and outputs RTCM corrections through its primary communications port. The SBX-4 asserts the lock signal on pin 16 of J300 (active high).
 11. When input power to the SBX-4 is cycled, or the receiver reset circuit is activated, the SBX-4 will attempt to reacquire the last station to which it was tuned. In Automatic mode, the SBX-4 will try to lock to this station for 10 seconds before initiating a fresh GS to identify valid beacons. If set to Manual mode, the receiver will attempt to lock to the last known beacon indefinitely, or until commanded to a new frequency and bit rate. In Database mode, the SBX-4 will try to lock to the closest station using the last valid position.
-

Chapter 3: SBX-4 Operation

Overview

Introduction This chapter provides instructions on how to operate the SBX-4.

Contents

	Topic	See Page
	Introduction	23
	Beacon Information	24
	New SBX-4 Commands	28
	Evaluating Performance	32

Introduction

Overview

Many marine authorities, such as coast guards, have installed networks of radio beacons that broadcast DGPS corrections to users of this system. With the increasing utility of these networks for terrestrial applications, there is an increasing trend towards densifying networks inland.

The SBX-4 is able to operate in manual or automatic tuning mode or using Database mode which will select the closest station in compliance with IEC 61108-4 standards. In Database mode, the receiver will search for the closest station based on its current location and distance to the internal list of station locations.

This chapter includes information on the following topics:

- Beacon information
 - Operating modes
 - Evaluating performance
-

Beacon Information

Beacon information

The International Association of Marine Aids to Navigation and Lighthouse Authorities (IALA) endeavors to maintain an accurate listing of DGPS radio beacons worldwide that is available on the Internet from their home page:

<http://www.iala-aism.org/>

This listing contains the following information regarding currently operating beacons and potential new sites:

- Station name
- Frequency
- MSK rate
- Location Transmitting ID
- Reference station ID
- Field Strength
- Operating notes

For detailed information on radio beacon transmissions, please refer to the [Hemisphere GNSS Technical Reference Manual](#).

Operating modes

The SBX-4 may be operated in Automatic Beacon Search (ABS) mode, Manual Tune or Database mode. In ABS mode, the receiver will identify and tune to the station providing the strongest DGPS signal using two receiver channels. In Manual mode, you specify the frequency to which the receiver will tune. In Manual mode, only the primary receiver channel is used. In Database mode, the receiver will search for the closest station based on its current location and distance to the internal list of station locations.

Refer to the [Hemisphere GNSS' Technical Reference Manual](#) for commands relating to changing the operating mode and monitoring receiver performance.

Continued on next page

Beacon Information, Continued

Automatic Beacon Search (ABS) Mode

The SBX-4 beacon receiver operates in ABS mode by default, selecting and tuning to the most appropriate beacon without operator intervention. The SBX-4 uses its two independent channels to identify and lock to the best DGPS beacon.

ABS mode is ideal for navigation applications over considerable areas with various beacon stations available, eliminating the need for operator intervention when traveling from one beacon coverage zone to another.

ABS Global Search

When powered for the first time in ABS mode, the SBX-4 initiates a Global Search (GS), examining each available DGPS beacon frequency, and recording Signal Strength (SS) measurements in units of decibel micro volts to the Global Search Table. The receiver uses these measured values to compute an average SS, noise floor and to sort the frequencies in descending order of SS.

This initial phase of the GS takes approximately 3 to 4 seconds to scan all 84 beacon channels in the frequency band using both channels. Once scanned, and with SS numbers identified for each beacon channel, both receiver channels cooperatively examine the frequencies with the highest SS measurements, above the computed noise floor, to determine the station providing the strongest RTCM signal.

The receiver's primary channel locks to the first identified DGPS broadcast, while the second channel continues searching in the background for superior beacon signals. If no signal is available, the SBX-4 will initiate a fresh GS, continuing this cycle until it finds a valid beacon.

The secondary acquisition phase of the GS composes the remainder of the time required to acquire the beacon signal. The time required to acquire a beacon in ABS mode is dependent upon the signal quality of DGPS beacons in your area, and their relative strength to other non-DGPS beacon signals in the 283.5 to 325.0 kHz band.

Continued on next page

Beacon Information, Continued

ABS Global Search, continued

As this frequency range is a navigation band, it is shared with other navigation aids such as non- directional beacons used for aviation and marine navigation. Depending on the signals available, initial acquisition make take less than 15 seconds for a strong beacon station, from a cold start or up to a couple minutes if a beacon site is weak relative to other signals. During the acquisition phase, if bit errors occur due to a weak DGPS beacon signal or environmental noise occurs, the time to acquire may be longer.

ABS Background Search

During the Background Search, the second channel examines all frequencies at both the 100 and 200 bps MSK bit rates to identify beacons possessing superior signal quality. If a DGPS broadcast is identified that exhibits a 2 dB greater signal strength than that of the primary station, the receiver will automatically switch to this beacon. No loss of lock occurs on the primary station during the background scan process. If the secondary receiver channel finds a superior station, the main channel is instructed to tune to the new beacon.

The SBX-4 stores the current primary beacon in memory so that it is available upon subsequent power- up. You may force a new GS at any time using the \$PCSI,4<CR><LF> proprietary NMEA 0183 command defined in the [Hemisphere GNSS Technical Reference Manual](#).

Continued on next page

Beacon Information, Continued

Manual Mode In Full Manual Tune mode, you may specify a frequency and bit rate for the receiver to tune to or specify the frequency only, allowing the SBX-4 to identify the correct MSK bit rate automatically (Partial Manual Tune mode). Setting manual operation is discussed in [Hemisphere GNSS' Technical Reference Manual](#), using the \$GPMSK NMEA 0183 command.

Acquisition of a beacon in manual tune mode is dependent upon the data rate of the station. In Full Manual Tune mode with an MSK rate of 200 bps, signal acquisition should occur within 5 seconds if no demodulation errors occur. Signal acquisition should occur within 10 seconds for a modulation rate of 100 bps provided that no demodulation errors occur.

Partial Manual Tune mode requires that the SBX-4 identify the correct MSK rate automatically. This automatic detection could result in signal acquisition rates of up to approximately 15 seconds.

Database Mode This operating mode has been added to the SBX-4 in order to be compliant with the specification IEC 61108-4 for ship borne DGPS maritime radio beacon receiver equipment. The basic operation is outlined below.

1. The receiver will determine the 10 closest stations after receiving a valid RMC message on PORT 0. This list can be accessed using the command \$PCSI,3,2.
2. The primary channel tries to tune to the closest available station, using the frequency and bit rate specified in the station database.
3. The background channel tunes to the frequency of the closest station using an alternate bit rate.
4. The primary channel retunes to the alternate bit rate if lock is achieved on the background channel (with acceptable station health and WER).
5. The background channel continually searches for a closer station using the station database once a lock is achieved on the primary channel.
6. The primary channel will remain tuned to the same station unless one of the following occurs:
 - Word error rate (WER) drops below 10%
 - Station becomes unhealthy or unmonitored
 - Background channel finds a closer station
 - Position changes enough to affect station list

New SBX-4 Commands

New SBX-4 commands

Database tune command:

```
$GPMSK,,D,,D<CR><LF>
```

Display contents of station database:

```
$PCSI,3,3<CR><LF>
```

Response:

```
$PCSI,3,3,IDref1,IDref2,StationID,name,freq,lat,long,datum,s tatus
```

```
$PCSI,3,3, ...
```

```
$PCSI,3,3, ...
```

```
$PCSI,3,3, ...
```

Example:

```
$PCSI,3,3,0282,0283,0891,Level Island AK,2950,20554,- 24221,1,0
```

```
$PCSI,3,3,0306,0307,0906,Sandspit BC,3000,19377,- 23991,1,0
```

```
$PCSI,3,3,0278,0279,0889,Annette Is. AK,3230,20044,- 23951,1,0
```

```
$PCSI,3,3,0300,0301,0909,Alert Bay BC,3090,18412,- 23099,1,0
```

```
$PCSI,3,3,0302,0303,0908,Amphitrite Pt BC,3150,17806,- 22850,1,0
```

```
$PCSI,3,3,0270,0271,0885,C. Mendocino CA,2920,14718,- 22641,1,0
```

```
$PCSI,3,3,0272,0273,0886,Fort Stevens OR,2870,16817,- 22559,1,0
```

```
$PCSI,3,3,0304,0305,0907,Richmond BC,3200,17903,- 22407,1,0
```

```
$PCSI,3,3,0276,0277,0888,Whidbey Is. WA,3020,17587,- 22331,1,0...
```

Continued on next page

New SBX-4 Commands, Continued

**New SBX-4
commands,
continued**

- Latitude is scaled by 364 (+ indicates N, - indicates S)
- Longitude is scaled by 182 (+ indicates E, - indicates W)
- Datum: 1 (NAD83), 0 (WGS84)
- Status: 0 (operational), 1 (undefined), 2 (no information), 3 (do not use)

Display list of 10 closest stations:

\$PCSI,3,2<CR><LF>

Response:

\$PCSI,3,2,StationID,name,freq,status,distance,time,date,health, WER

\$PCSI,3,2, ...

\$PCSI,3,2, ...

\$PCSI,3,2, ...

Continued on next page

New SBX-4 Commands, Continued

**New SBX-4
commands,
continued**

Example:

\$PCSI,3,2, 849,Polson MT,2870,0,210,0,0,-1,-1

\$PCSI,3,2, 848,Spokane WA,3160,0,250,0,0,-1,-1

\$PCSI,3,2, 907,Richmond BC,3200,0,356,0,0,-1,-1

\$PCSI,3,2, 888,Whidbey Is. WA,3020,0,363,0,0,-1,-1

\$PCSI,3,2, 887,Robinson Pt. WA,3230,0,383,0,0,-1,-1

\$PCSI,3,2, 874,Billings MT,3130,0,389,0,0,-1,-1

\$PCSI,3,2, 871,Appleton WA,3000,0,420,0,0,-1,-1

\$PCSI,3,2, 908,Amphitrite Pt BC,3150,0,448,0,0,-1,-1

\$PCSI,3,2, 886,Fort Stevens OR,2870,0,473,0,0,-1,-1

\$PCSI,3,2, 909,Alert Bay BC,3090,0,480,0,0,-1,-1

Notes:

- Distance is calculated in nautical miles
- The name field will display time/date of update for a station added by using information from an almanac message (in the format ddmmyy->time)
- The time and date fields have not yet been implemented and currently display 0
- Status: 0 (operational), 1 (undefined), 2 (no information), 3 (do not use)
- Health: -1 (not updated), 8 (undefined), 0-7 (valid range)
- WER: -1 (not updated), 0-100 (valid range) Status message:
\$PCSI,1,1<CR><LF>

Continued on next page

New SBX-4 Commands, Continued

**New SBX-4
commands,
continued**

Response:

\$PCSI,CS0,Pxxx- y.yyy,SN,fff.f,M,ddd,R,SS,SNR,MTP,**WER**,,ID,H,T,**G**

Example:

\$PCSI,CS0,P030- 0.000,19001,313.0,D,100,D,18,8,80,**0**,63,0,1,**48**

Notes:

- Tune modes are “**A**”uto, “**M**”anual and “**D**”atabase
 - WER: percentage of bad 30-bit RTCM words in the last 25 words
 - G: AGC gain in dB (0 to 48 db)
 - ID: 1024 (undefined), 0-1023 (valid range)
 - H: 8 (undefined) 0-7 (valid range)
-

Evaluating Performance

Evaluating Performance

The SBX-4 calculates a Signal to Noise Ratio (SNR), measured in dB (decibels), which indicates the receiver's performance. The SNR is height of the signal above the noise floor. The higher the SNR, the better your beacon receiver is demodulating the signal. By monitoring the SNR, you can determine the optimum location with respect to beacon reception. The SNR is available in the \$CRMSS NMEA message described in [Hemisphere GNSS' Technical Reference Manual](#).

The SNR is also a function of the installation, as it may differ between locations, depending on the amount of local noise at each. The optimum antenna location will be the position where your average SNR is highest. You should turn on all accessories that you intend to use during normal operation to test the installation. If noise is affecting performance, try to find a better location with higher SNR.

Table 2-1 describes the general quality of reception as measured by the SNR reading of the SBX-4.

Table 2-1: SBX-4 Performance - SNR reading

SNR	Reception Reading	Data Throughput
> 25	Excellent	100% data throughput
20 to 25	Very good	100% data throughput
15 to 20	Good	Good data throughput up to 100%
10 to 15	Stable	Moderate to good data throughput
7 to 10	Intermittent	Low data throughput
< 7	No lock	No data throughput

Appendix A: Troubleshooting

Overview

Introduction Appendix A provides troubleshooting for common problems.

Contents

	Topic	See Page
	Troubleshooting	34

Troubleshooting

Troubleshooting Table A-1 provides troubleshooting for common SBX-4 problems.

Table A-1: Troubleshooting

Symptom	Possible solution
No data from SBX-4	<ul style="list-style-type: none"> • Check receiver power status (power LED illuminated?) • Verify that SBX-4 is locked to a valid beacon (Lock LED illuminated) • Check integrity of power, antenna and cable connections
Random data from SBX-4	Check transmitting beacon status
Low SNR	<ul style="list-style-type: none"> • Check integrity of antenna connections • Check antenna ground • Select alternate antenna position
Database mode not selectable	<ul style="list-style-type: none"> • Ensure that the SBX-4 is receiving valid RMC messages on Port 0
No signal lock	<ul style="list-style-type: none"> • Check antenna connections • Verify MSK rate is set correctly or choose Auto MSK rate (100, 200 or Auto) • Verify frequency of transmitting beacon or choose Auto Frequency Mode • Check antenna • Verify SBX-4 antenna port output voltage (5 VDC) • Verify 5 VDC across antenna cable connector

Continued on next page

Troubleshooting, Continued

Troubleshooting , continued

Symptom	Possible solution
No response to NMEA commands and queries	<ul style="list-style-type: none"> • Verify baud rate settings of SBX-4 and terminal device (SBX-4 default baud rate =4800 bd) • Verify communication parameter settings (8 data bits - no parity - 1 stop bit) • Check integrity of data cable connections • Verify pin connectivity between SBX-4 and terminal device
Non-differential GPS output	<ul style="list-style-type: none"> • Verify SBX-4 lock status • Verify matched SBX-4 output and GPS RTCM input baud rates • Verify GPS receiver RTCM compatibility • Verify GPS receiver DGPS configuration • Verify pin connectivity between SBX-4/Evaluation Module and GPS receiver • Verify communication parameter settings (8 data bits - no parity - 1 stop bit) • Verify communication levels of SBX- 4 and GPS receiver are matched (HCMOS vs RS-232C vs RS-422) • Verify data cable connections

Appendix B: Technical Specifications

Introduction Appendix B contains the SBX-4 technical specifications.

Contents

Topic	See Page
Technical Specifications	37

Continued on next page

Technical Specifications

Technical Specifications

SBX-4 Specifications

Tables B-1 to B-5 provide the SBX-4's operational, serial interface, power, mechanical and environmental specifications.

Table B-1: Operational

Item	Specification
Channels	2-channel parallel tracking
Frequency range	283.5 - 325.0 kHz
Channel spacing	500 Hz
MSK bit rate	50, 100 and 200 bps
Operating modes	Manual, automatic and database
Cold start time	< 1 minute typical
Re-acquisition time	< 2 seconds typical
Demodulation	Minimum shift key (MSK)
Ripple (in-band)	3 dB
Dynamic range	100 dB
Frequency offset	+/- 8 Hz (~ 27 ppm)
Antenna input impedance	50 Ohms
Decoding	RTCM 6/8
Frequency selection	Manual or offset

Continued on next page

Technical Specifications, Continued

Technical Specifications

Table B-2: Serial Interface

Item	Specification
Serial ports	2 full-duplex
Interface level	HCMOS, tracks input voltage
Data connector	2 x 12 0.1 in (.25 cm) header
Data port baud rate	4800, 9600, 19200, 38400 and 57600 baud
Correction input/output protocol	RTCM SC-104
Data input/output format	NMEA 0183

Table B-3: Power

Item	Specification
Input voltage	3.3 to 5.5 VDC
Power consumption	< 0.25 W @ 3.3 VDC (no antenna)
Current consumption	< 70 mA @ 3.3 VDC (no antenna)
Antenna voltage output	5 VDC applied externally

Table B-4: Mechanical

Item	Specification
Dimension	76.2 mm L x 50.8 mm W x 13.8 mm H (93.0 in L x 2.0 in W x 0.54 in H)
Weight	30.0 g (1.1 oz)
Connector J200	1 x 4 pin header, 2.54 mm (0.1 in) spacing
Connector J300	2 x 12 pin header, 2.54 mm (0.1 in) spacing

Continued on next page

Technical Specifications, Continued

Technical Specifications, continued

Table B-5: Environmental

Item	Specification
Storage temperature	-30° C to +70° C (-22° F to +158° F)
Operating temperature	-40° C to +80° C (-40° F to +176° F)
Humidity	95% non-condensing
EMC	EN50081-4-2 ESD
Output	5 VDC applied externally

End User License Agreement

End User license agreement

IMPORTANT - This is an agreement (the "**Agreement**") between you, the end purchaser ("**Licensee**") and Hemisphere GNSS Inc. ("**Hemisphere**") which permits Licensee to use the Hemisphere software (the "**Software**") that accompanies this Agreement. This Software may be licensed on a standalone basis or may be embedded in a Product. Please read and ensure that you understand this Agreement before installing or using the Software Update or using a Product.

In this agreement any product that has Software embedded in it at the time of sale to the Licensee shall be referred to as a "**Product**". As well, in this Agreement, the use of a Product shall be deemed to be use of the Software which is embedded in the Product.

BY INSTALLING OR USING THE SOFTWARE UPDATE OR THE PRODUCT, LICENSEE THEREBY AGREES TO BE LEGALLY BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS, (I) DO NOT INSTALL OR USE THE SOFTWARE, AND (II) IF YOU ARE INSTALLING AN UPDATE TO THE SOFTWARE, DO NOT INSTALL THE UPDATE AND PROMPTLY DESTROY IT.

HEMISPHERE PROVIDES LIMITED WARRANTIES IN RELATION TO THE SOFTWARE. AS WELL, THOSE WHO USE THE EMBEDDED SOFTWARE DO SO AT THEIR OWN RISK. YOU SHOULD UNDERSTAND THE IMPORTANCE OF THESE AND OTHER LIMITATIONS SET OUT IN THIS AGREEMENT BEFORE INSTALLING OR USING THE SOFTWARE OR THE PRODUCT.

1. **LICENSE.** Hemisphere hereby grants to Licensee a non-transferable and non-exclusive license to use the Software as embedded in a Product and all Updates (collectively the "**Software**"), solely in binary executable form.
2. **RESTRICTIONS ON USE.** Licensee agrees that Licensee and its employees will not directly or indirectly, in any manner whatsoever:
 - a. install or use more copies of the Software than the number of copies that have been licensed;
 - b. use or install the Software in connection with any product other than the Product the Software was intended to be used or installed on as set out in the documentation that accompanies the Software.
 - c. copy any of the Software or any written materials for any purpose except as part of Licensee's normal backup processes;
 - d. modify or create derivative works based on the Software;
 - e. sub-license, rent, lease, loan or distribute the Software;
 - f. permit any third party to use the Software;
 - g. use or operate Product for the benefit of any third party in any type of service outsourcing, application service, provider service or service bureau capacity;
 - h. reverse engineer, decompile or disassemble the Software or otherwise reduce it to a human perceivable form;
 - i. Assign this Agreement or sell or otherwise transfer the Software to any other party except as part of the sale or transfer of the whole Product.
3. **UPDATES.** At Hemisphere's discretion Hemisphere may make Updates available to Licensee. An update ("**Update**") means any update to the Software that is made available to Licensee including error corrections, enhancements and other modifications. Licensee may access, download and install Updates during the Warranty Period only. All Updates that Licensee downloads, installs or uses shall be deemed to be Software and subject to this Agreement. Hemisphere reserves the right to modify the Product without any obligation to notify, supply or install any improvements or alterations to existing Software.
4. **SUPPORT.** Hemisphere may make available directly or through its authorized dealers telephone and email support for the Software. Contact Hemisphere to find the authorized dealer near you. As well, Hemisphere may make available user and technical documentation regarding the Software. Hemisphere reserves the right to reduce and limit access to such support at any time.

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

5. **BACKUPS AND RECOVERY.** Licensee shall back-up all data used, created or stored by the Software on a regular basis as necessary to enable proper recovery of the data and related systems and processes in the event of a malfunction in the Software or any loss or corruption of data caused by the Software. Licensee shall assume all risks of loss or damage for any failure to comply with the foregoing.
6. **OWNERSHIP.** Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold.
7. **TRADEMARKS.** Hemisphere GNSS[®], the Hemisphere GNSS logo, TRACER[™], Crescent[®], Eclipse[™], e-Dif[®], L-Dif[™], PocketMax[™], S320[™], SBX-4[™], Vector[™], Vega[™], Phantom[™] XF1[™], XF2[™], Cygnus[™], Atlas[™] aRTK, SureFix[™], Athena[™], Aquila[™], Lyra[™], Outback Guidance[™], and EDRIVE[™] are proprietary trademarks of Hemisphere GNSS, Inc. Other trademarks are the properties of their respective owners. and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners.
8. **LIMITED WARRANTY.** Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free.
9. **WARRANTY EXCLUSIONS.** The warranty set forth in Section (8) will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere GNSS does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable.
10. **WARRANTY DISCLAIMER.** EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE.
11. **LIMITS ON WARRANTY DISCLAIMER.** Some jurisdictions do not allow the exclusion of implied warranties or conditions, so some of the above exclusions may not apply to Licensee. In that case, any implied warranties or conditions which would then otherwise arise will be limited in duration to ninety (90) days from the date of the license of the Software or the purchase of the Product. The warranties given herein give Licensee specific legal rights and Licensee may have other rights which may vary from jurisdiction to jurisdiction.

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

12. **CHANGE TO WARRANTY.** No employee or agent of Hemisphere is authorized to change the warranty provided or the limitation or disclaimer of warranty provisions. All such changes will only be effective if pursuant to a separate agreement signed by senior officers of the respective parties.
13. **WARRANTY CLAIM.** In the event Licensee has a warranty claim Licensee must first check for and install all Updates that are made available. The warranty will not otherwise be honored. Proof of purchase may be required. Hemisphere does not honor claims asserted after the end of the Warranty Period.
14. **LICENSEE REMEDIES.** In all cases which involve a failure of the Software to conform in any material respect to the documentation during the Warranty Period or a breach of a warranty, Hemisphere's sole obligation and liability, and Licensee's sole and exclusive remedy, is for Hemisphere, at Hemisphere's option, to (a) repair the Software, (b) replace the Software with software conforming to the documentation, or (c) if Hemisphere is unable, on a reasonable commercial basis, to repair the Software or to replace the Software with conforming software within ninety (90) days, to terminate this Agreement and thereafter Licensee shall cease using the Software. Hemisphere will also issue a refund for the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
15. **LIMITATION OF LIABILITY.** IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH.
16. **LIMITS ON LIMITATION OF LIABILITY.** Some jurisdictions do not allow for the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Licensee and Licensee may also have other legal rights which may vary from jurisdiction to jurisdiction.
17. **BASIS OF BARGAIN.** Licensee agrees and acknowledges that Hemisphere has set its prices and the parties have entered into this Agreement in reliance on the limited warranties, warranty disclaimers and limitations of liability set forth herein, that the same reflect an agreed-to allocation of risk between the parties (including the risk that a remedy may fail of its essential purpose and cause consequential loss), and that the same forms an essential basis of the bargain between the parties. Licensee agrees and acknowledges that Hemisphere would not have been able to sell the Product at the amount charged on an economic basis without such limitations.
18. **PROPRIETARY RIGHTS INDEMNITY.** Hemisphere shall indemnify, defend and hold harmless Licensee from and against any and all actions, claims, demands, proceedings, liabilities, direct damages, judgments, settlements, fines, penalties, costs and expenses, including royalties and attorneys' fees and related costs, in connection with or arising out of any actual infringement of any third party patent, copyright or other intellectual property right by the Software or by its use, in accordance with this Agreement and documentation, PROVIDED THAT: (a) Hemisphere has the right to assume full control over any action, claim, demand or proceeding, (b) Licensee shall promptly notify Hemisphere of any such action, claim, demand, or proceeding, and (c) Licensee shall give Hemisphere such reasonable assistance and tangible material as is reasonably available to Licensee for the defense of the action, claim, demand or proceeding. Licensee shall not settle or compromise any of same for which Hemisphere has agreed to assume responsibility without Hemisphere's prior written consent. Licensee may, at its sole cost and expense, retain separate counsel from the counsel utilized or retained by Hemisphere. 19. **INFRINGEMENT.** If use of the Software may be enjoined due to a claim of infringement by a third party then, at its sole discretion and expense, Hemisphere may do one of the following: (a)

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

19. negotiate a license or other agreement so that the Product is no longer subject to such a potential claim, (b) modify the Product so that it becomes non-infringing, provided such modification can be accomplished without materially affecting the performance and functionality of the Product, (c) replace the Software, or the Product, with non-infringing software, or product, of equal or better performance and quality, or (d) if none of the foregoing can be done on a commercially reasonable basis, terminate this license and Licensee shall stop using the Product and Hemisphere shall refund the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
20. The foregoing sets out the entire liability of Hemisphere and the sole obligations of Hemisphere to Licensee in respect of any claim that the Software or its use infringes any third party rights.
21. **INDEMNIFICATION.** Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption. **TERMINATION.** Licensee may terminate this Agreement at any time without cause. Hemisphere may terminate this Agreement on 30 days notice to Licensee if Licensee fails to materially comply with each provision of this Agreement unless such default is cured within the 30 days. Any such termination by a party shall be in addition to and without prejudice to such rights and remedies as may be available, including injunction and other equitable remedies. Upon receipt by Licensee of written notice of termination from Hemisphere or termination by Licensee, Licensee shall at the end of any notice period (a) cease using the Software; and (b) return to Hemisphere (or destroy and provide a certificate of a Senior Officer attesting to such destruction) the Software and all related material and any magnetic or optical media provided to Licensee. The provisions of Sections 6), 7), 8), 9), 10), 15), 21), 26) and 27) herein shall survive the expiration or termination of this Agreement for any reason.
22. **EXPORT RESTRICTIONS.** Licensee agrees that Licensee will comply with all export control legislation of Canada, the United States, Australia and any other applicable country's laws and regulations, whether under the Arms Export Control Act, the International Traffic in Arms Regulations, the Export Administration Regulations, the regulations of the United States Departments of Commerce, State, and Treasury, or otherwise as well as the export control legislation of all other countries.
23. **PRODUCT COMPONENTS.** The Product may contain third party components. Those third party components may be subject to additional terms and conditions. Licensee is required to agree to those terms and conditions in order to use the Product.
24. **FORCE MAJEURE EVENT.** Neither party will have the right to claim damages as a result of the other's inability to perform or any delay in performance due to unforeseeable circumstances beyond its reasonable control, such as labor disputes, strikes, lockouts, war, riot, insurrection, epidemic, Internet virus attack, Internet failure, supplier failure, act of God, or governmental action not the fault of the non-performing party.
25. **FORUM FOR DISPUTES.** The parties agree that the courts located in Calgary, Alberta, Canada and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief.
26. **APPLICABLE LAW.** This Agreement shall be governed by the laws of the Province of Alberta, Canada, exclusive of any of its choice of law and conflicts of law jurisprudence.
27. **CISG.** The United Nations Convention on Contracts for the International Sale of Goods will not apply to this Agreement or any transaction hereunder.

GENERAL. This is the entire agreement between Licensee and Hemisphere relating to the Product and Licensee's use of the same, and supersedes all prior, collateral or contemporaneous oral or written representations, warranties or agreements regarding the same. No amendment to or modification of this Agreement will be binding unless in writing and signed by duly authorized representatives of the parties. Any and all terms and conditions set out in any correspondence between the parties or set out in a purchase order which are different from or in addition to the terms and conditions set forth herein, shall have no application and no written notice of same shall be required. In the event that one or more of the provisions of this Agreement is found to be illegal or unenforceable, this Agreement shall not be rendered inoperative but the remaining provisions shall continue in full force and effect.

Warranty Notice

Warranty notice

COVERED PRODUCTS: This warranty covers all products manufactured by Hemisphere GNSS and purchased by the end purchaser (the "Products"), unless otherwise specifically and expressly agreed in writing by Hemisphere GNSS.

LIMITED WARRANTY: Hemisphere GNSS warrants solely to the end purchaser of the Products, subject to the exclusions and procedures set forth below, that the Products sold to such end purchaser and its internal components shall be free, under normal use and maintenance, from defects in materials, and workmanship and will substantially conform to Hemisphere GNSS's applicable specifications for the Product, for a period of 12 months from delivery of such Product to such end purchaser (the "Warranty Period"). Repairs and replacement components for the Products are warranted, subject to the exclusions and procedures set forth below, to be free, under normal use and maintenance, from defects in material and workmanship, and will substantially conform to Hemisphere GNSS's applicable specifications for the Product, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater.

EXCLUSION OF ALL OTHER WARRANTIES. The LIMITED WARRANTY shall apply only if the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GNSS relevant User's Manual and Specifications, AND the Product is not modified or misused. The Product is provided "AS IS" and the implied warranties of MERCHANTABILITY and FITNESS FOR A PARTICULAR PURPOSE and ALL OTHER WARRANTIES,

express, implied or arising by statute, by course of dealing or by trade usage, in connection with the design, sale, installation, service or use of any products or any component thereof, are EXCLUDED from this transaction and shall not apply to the Product. The LIMITED WARRANTY is IN LIEU OF any other warranty, express or implied, including but not limited to, any warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, title, and non-infringement.

LIMITATION OF REMEDIES. The purchaser's EXCLUSIVE REMEDY against Hemisphere GNSS shall be, at Hemisphere GNSS's option, the repair or replacement of any defective Product or components thereof. The purchaser shall notify Hemisphere GNSS or a Hemisphere GNSS's approved service center immediately of any defect. Repairs shall be made through a Hemisphere GNSS approved service center only. Repair, modification or service of Hemisphere GNSS products by any party other than a Hemisphere GNSS approved service center shall render this warranty null and void. The remedy in this paragraph shall only be applied in the event that the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GNSS's relevant User's Manual and Specifications, AND the Product is not modified or misused. NO OTHER REMEDY (INCLUDING, BUT NOT LIMITED TO, SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR CONTINGENT DAMAGES FOR LOST PROFITS, LOST SALES, INJURY TO PERSON OR PROPERTY, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL LOSS) SHALL BE AVAILABLE

TO PURCHASER, even if Hemisphere GNSS has been advised of the possibility of such damages. Without limiting the foregoing, Hemisphere GNSS shall not be liable for any damages of any kind resulting from installation, use, quality, performance or accuracy of any Product.

HEMISPHERE IS NOT RESPONSIBLE FOR PURCHASER'S NEGLIGENCE OR UNAUTHORIZED USES OF THE PRODUCT.

IN NO EVENT SHALL Hemisphere GNSS BE IN ANY WAY RESPONSIBLE FOR ANY DAMAGES RESULTING FROM PURCHASER'S OWN NEGLIGENCE, OR FROM OPERATION OF THE PRODUCT IN ANY WAY OTHER THAN AS SPECIFIED IN Hemisphere GNSS's RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GNSS is NOT RESPONSIBLE for defects or performance problems resulting from (1) misuse, abuse, improper installation, neglect of Product; (2) the utilization of the Product with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Hemisphere GNSS; (3) the operation of the Product under any specification other than, or in addition to, the specifications set forth in Hemisphere GNSS's relevant User's Manual and Specifications; (4) damage caused by accident or natural events, such as lightning (or other electrical discharge) or fresh/ salt water immersion of Product; (5) damage occurring in transit; (6) normal wear and tear; or (7) the operation or failure of operation of any satellite-based positioning system or differential correction service; or the availability or performance of any satellite-based positioning signal or differential correction signal.

THE PURCHASER IS RESPONSIBLE FOR OPERATING THE VEHICLE SAFELY. The purchaser is solely responsible for the safe operation of the vehicle used in connection with the Product, and for maintaining proper system control settings. UNSAFE DRIVING OR SYSTEM CONTROL SETTINGS CAN RESULT IN PROPERTY DAMAGE, INJURY, OR DEATH.

Continued on next page

Warranty Notice, Continued

Warranty notice, continued

The purchaser is solely responsible for his/her safety and for the safety of others. The purchaser is solely responsible for maintaining control of the automated steering system at all times. THE PURCHASER IS SOLELY RESPONSIBLE FOR ENSURING THE PRODUCT IS PROPERLY AND CORRECTLY INSTALLED, CONFIGURED, INTERFACED, MAINTAINED, STORED, AND OPERATED IN ACCORDANCE WITH Hemisphere GNSS's RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GNSS does not warrant or guarantee the positioning and navigation precision or accuracy obtained when using Products. Products are not intended for primary navigation or for use in safety of life applications. The potential accuracy of Products as stated in Hemisphere GNSS literature and/or Product specifications serves to provide only an estimate of achievable accuracy based on performance specifications provided by the satellite service operator (i.e. US Department of Defense in the case of GPS and differential correction service provider. Hemisphere GNSS reserves the right to modify Products without any obligation to notify, supply or install any improvements or alterations to existing Products.

GOVERNING LAW. This agreement and any disputes relating to, concerning or based upon the Product shall be governed by and interpreted in accordance with the laws of the State of Arizona.

OBTAINING WARRANTY SERVICE. In order to obtain warranty service, the end purchaser must bring the Product to a Hemisphere GNSS approved service center along with the end purchaser's proof of purchase. Hemisphere GNSS does not warrant claims asserted after the end of the warranty period. For any questions regarding warranty service or to obtain information regarding the location of any of Hemisphere GNSS approved service center, contact Hemisphere GNSS at the following address:

Hemisphere GNSS

8515 E. Anderson Drive Scottsdale, AZ 85255, USA

Phone: +1-480-348-6380

Fax: +1-480-270-5070

TECHSUPPORT@HGSS.COM

WWW.HGSS.COM



Hemisphere GNSS Inc.
8515 East Anderson Drive
Scottsdale, Arizona, US 85255
Phone: 480-348-6380
Fax: 480-270-5070
PRECISION@HGNSS.COM
WWW.HGNSS.COM